



Uputstvo za montažu 6 Azala


Installation instructions 6 Azala

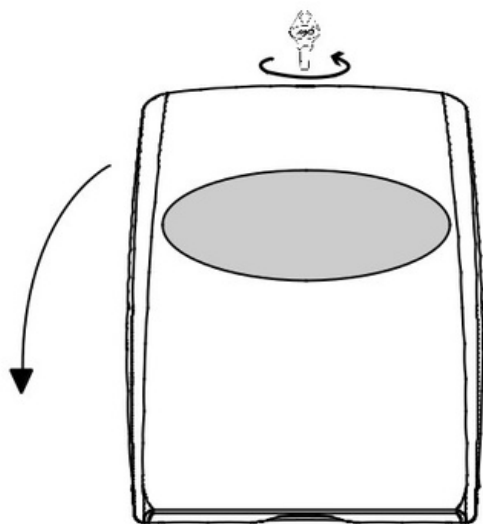


1. Otvorite dispenser pomoću ključa.
1. Open the dispenser with the key.

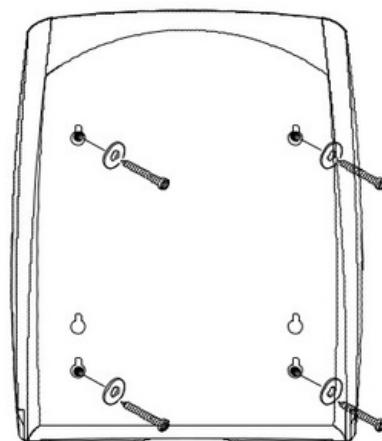

2. Pričvrstite dispenser za zid koristeći set šrafova.
2. Fix dispenser to the wall using the screws-kit.

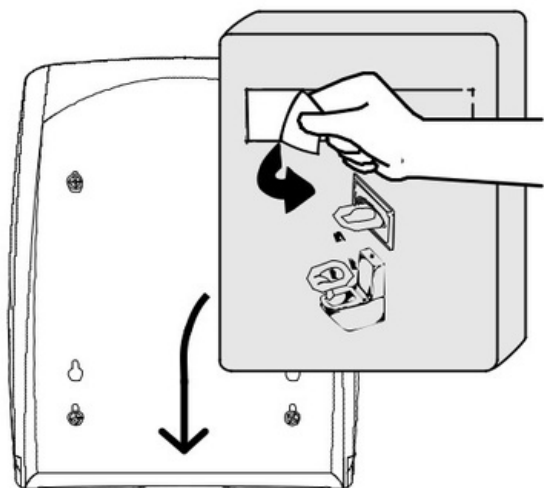

3. Postavite papir za WC-dasku u dispenser.
3. Place the WC toilet seat cover cartridge.

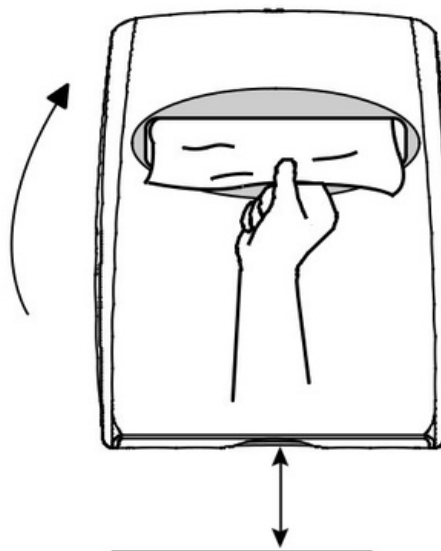

4. Zatvorite dispenser i izvadite prvu foliju.
4. Close dispenser and extract the first foil.

Preporučena visina za montažu: 1100 do 1300 mm
Recommended mounting height: 1100 to 1300 mm



Made in Italy